System settings



factory reset



version information

2D Barcode Scanner

Quick Start Guide



One-click pairing



TTL Serial mode





Turn on the buzzer



Turn off the buzzer

End character setting



Add enter



Add TAB



Add enter and newline



No terminator

Sleep time setting



Sleep time SET



30 sec



60 sec

No dormancy
First scan the sleep time set, and then scan
the sleep time you want to set

Mode setting



Normal mode



No loss mode



Inventory mode

Data management



Data upload



Total data



Clear data

Test code



SYC123456789SYC

Note: only the wireless version can scan the code to set the Inventory mode, but not the wired version!