

2D scanning platform

Quick Setup Manual

1. Factory reset

Note: Please use the "Factory Reset" function with caution, after reading this setup code, you will lose the current parameter settings and replace them with the factory default values.



Factory reset

2. Communication interface

This platform provides USB, USB-COM, TTL-232, RS-232 serial communication interface and PS2 keyboard port to communicate with the host. Through the communication interface, it can receive reading data and change the functional parameters.



**USB interface



USB-COM



TTL-232



RS-232



PS2 Keyboard

3. Country/language keyboard layout selection

The keyboard key arrangement, symbols, etc. corresponding to different languages in different countries are not the same. You can setup the keyboard format of different countries as needed.



** American



Germany



Denmark



Finland



Portugal



Sweden



France



Turkey -F



Italy



Norway



** CR



CR + LF



Spain



Turkey - Q



Tab



No Terminator



United Kingdom



Belgium

5. Sound settings

Turn on/off sound



** Turn on



Turn off

The sound type



Type 1



Type 2



**Type 3

4. Modify the terminator

Reading the following setup codes, you can quickly set the end character to CR, CR + LF or TAB.